Data Link Connector 3

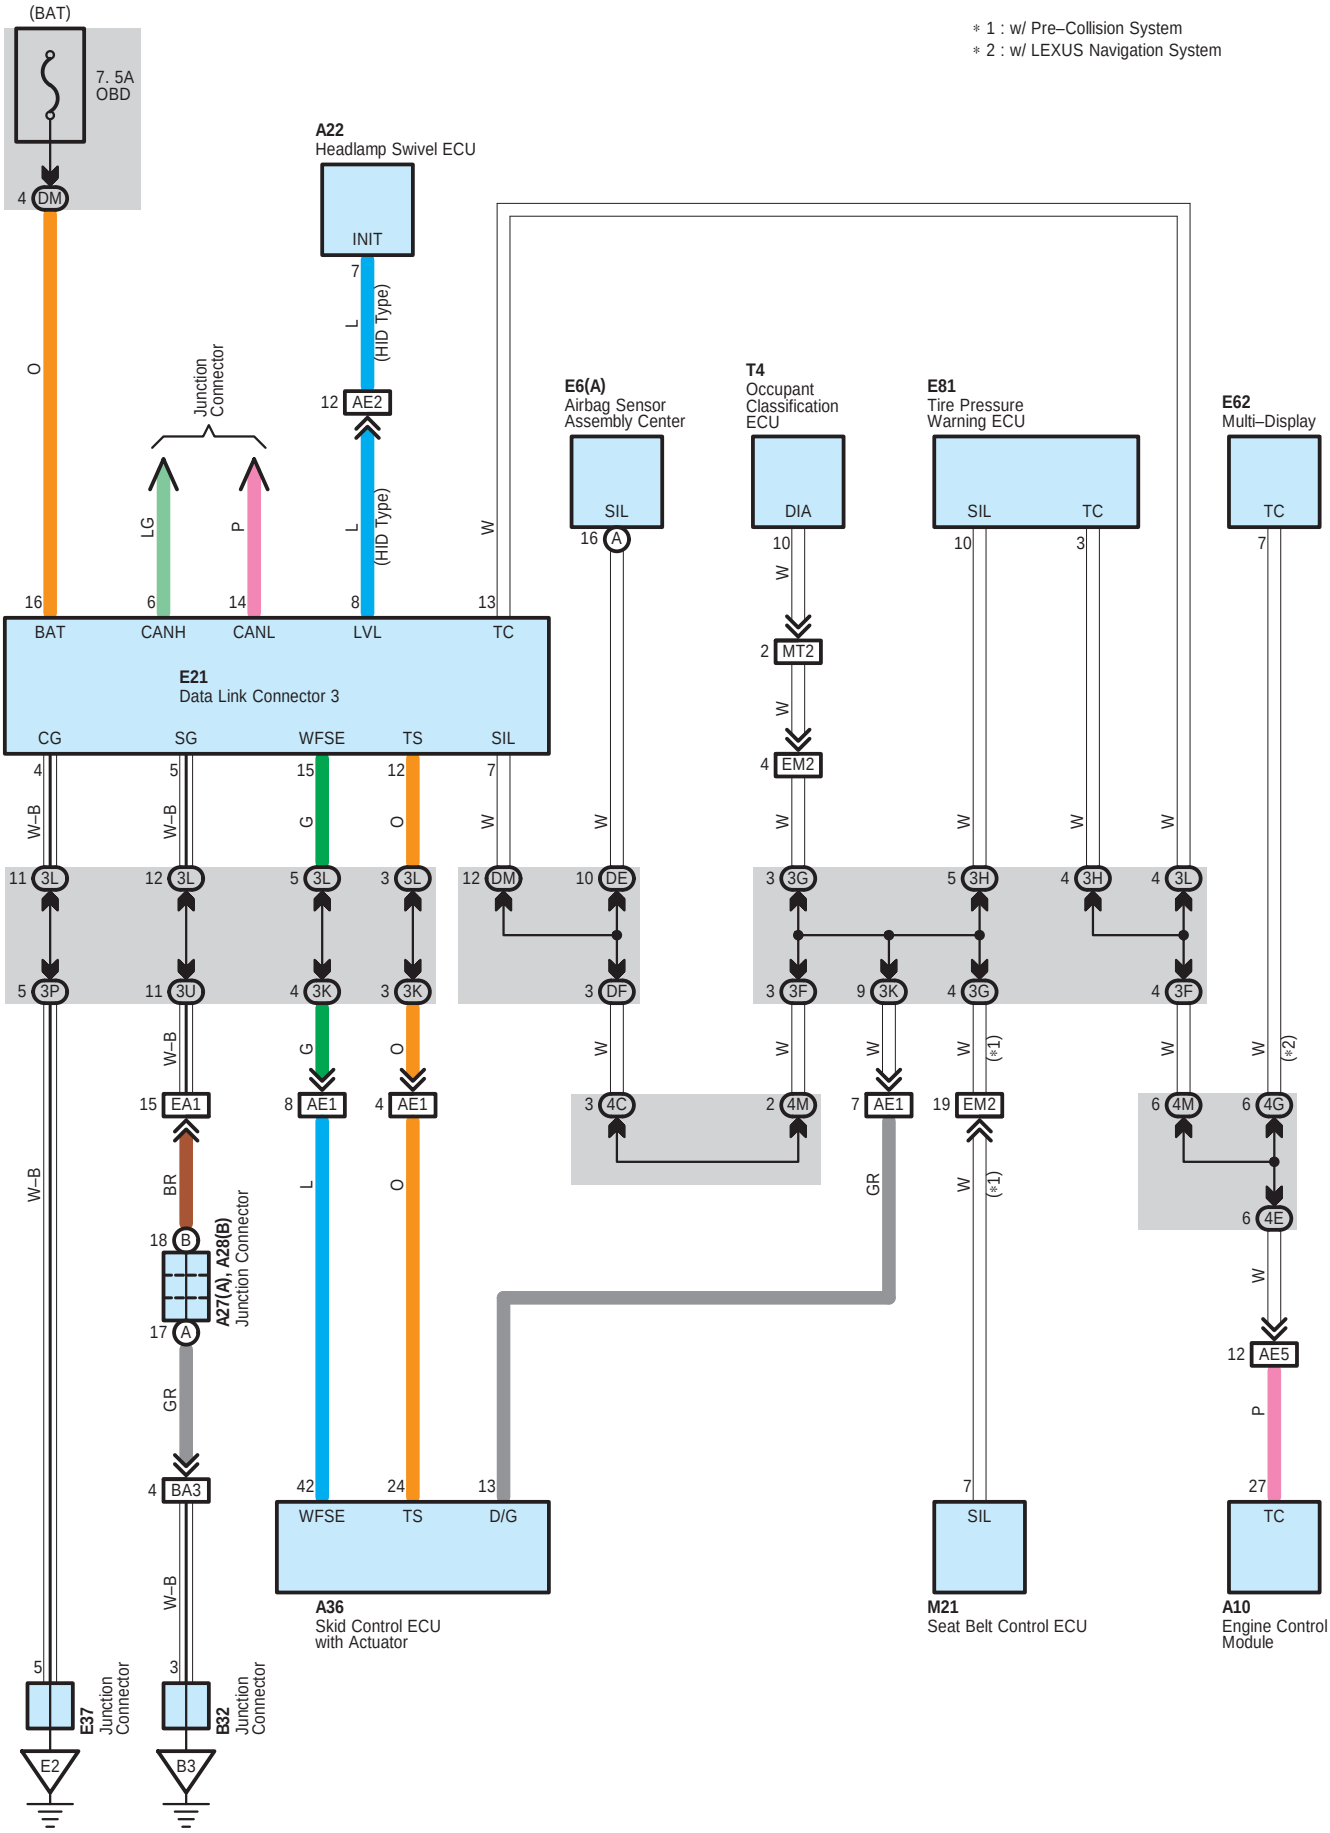

○ : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
A10	54	B32	57	E81	59
A22	60	E6 A	58	M21	62
A27 A	60	E21	58	T4	66
A28 B	60	E37	58		
A36	55	E62	59		

: **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
3F	36	Instrument Panel Wire and J/B No.3 (Instrument Panel Left)
3G		
3H		
3K		
3L		
3P		
3U		
4C	42	Instrument Panel Wire and J/B No.4 (Instrument Panel Right)
4E		
4G		
4M		
DE	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
DF		
DM		

: **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AE1	69	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Right)
AE2	69	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Left)
AE5	69	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Right)
BA3	68	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B and Engine Room J/B)
EA1	69	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
EM2	69	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
MT2	71	Floor No.2 Wire and Front Seat RH Wire (Under the Front RH Seat)

▽ : **Ground Points**

Code	See Page	Ground Points Location
B3	68	Right Side of the Cylinder Block
E2	69	Instrument Panel Brace LH